



ELLODI

Time to indulge in some beautifully clean skin.

GENERAL INFORMATION & SAFETY INSTRUCTIONS

Read this manual thoroughly before first use and keep it in a safe place for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

- Do not use the device for other than intended or specified purposes.
- This product is intended for indoor domestic use and is not intended for commercial, trade or industrial applications.
- Only for use on facial skin.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do NOT use the device if you have a skin condition or any medical concerns and consult a dermatologist before use.
- Do NOT use it with grainy facial cleansers, exfoliators, masks or peeling creams
- Remove all accessories prior to use, such as glasses, false eyelashes, and contact lenses
- Do NOT bring the device into contact with the eyelids or eyes themselves, only for use on the skin.
- Do NOT use the device in the same area for a long time
- Given the efficiency of the cleaning routine, we recommend that users do not use for more than 2 minutes a time.
- If you experience discomfort, discontinue use immediately and consult a physician.
- Do NOT share the device with others for reasons of hygiene.
- Do not leave the device in direct sunlight and never expose it to extreme heat or boiling water.
- Do not leave the device unattended while switched on
- Do not drop the device. Dropping or rough use of the unit may cause damage
- Do not use if the silicone is damaged
- Do not use if the device is damaged
- Do not disassemble the device, the device contains no serviceable parts
- Do not use the device under high-temperature environment
- Do not use the device while charging
- Do not fully immerse in water
- Keep the device clean, dry and dust free for prolonged use
- WARNING: Detach the device from the charging cable before cleaning it
- The product must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- WARNING: Use only an external supply with 5V DC 1A output
- This appliance contains battery that is non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.
- Dispose of used batteries to local regulations properly.
- In the event of a battery leaking, do not allow the liquid to come in contact with skin or eyes. If contact has been made, wash the affect area with copious amounts of water and seek medical advice.

WARRANTY DETAILS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you experience any issues with this product, or its performance is not what you had expected please contact us at Ellodi.

- Describe your problem with the product to our Customer Service Team
- If we need the product returned our team will provide shipping details
- Once the returned product is received our team will offer a replacement, credit or refund depending on the product problem

60 Day Satisfaction Guarantee

If you are not satisfied with our product or change your mind, simply contact our Customer Service Team within 60 days of receiving your product to initiate a return. Shipping fees will apply.

Email: help@ellodi.com.au
Phone: 1300 173 989 (Mon-Fri 8.30am-6.00pm EST)
Web: www.ellodi.com.au

FEATURES


- Sonic vibrations for a deep clean
- Flexible head for a thorough clean around your nose, eyes and chin
- Superfine bristles for a deep clean
- Low and medium speed cleansing
- 45 Degree heated massage
- Premium anti-bacterial silicone
- Travel cover for protection when on the go

TECHNICAL SPECIFICATIONS

Input Rating: DC 5V 1A
Power: 5W
Battery: 500mAh 3.7V 1.85Wh
Thermal temperature: 45 ±5°C (Environment temperature: 26°C)
Device weight: 130g
Device dimensions with cover: 44.5mm x 32.5mm x 158 mm

PARTS LIST

- 1 Silicone cleanser
- 2 Silicone bristles
- 3 LED indicator lights
- 4 Multi-function button
- 5 Massage ridges
- 6 Travel cover
- 7 DC charging port
- 8 DC USB charging cable

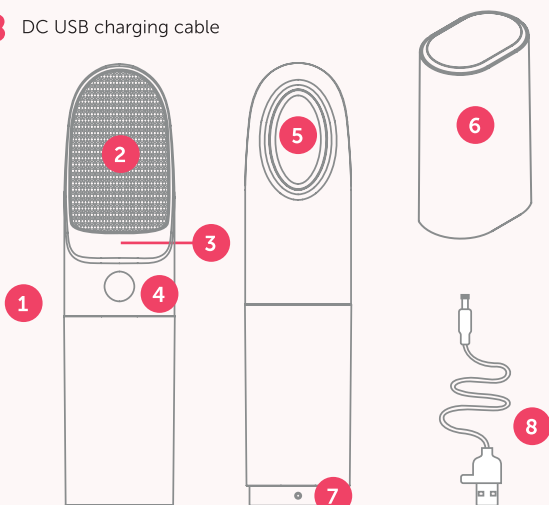

FIT TO YOUR REGIME


For the best results, use both day and night

- **Night:** Cleanse then use your usual night serum or cream
- **Day:** Cleanse then moisturise and apply sunscreen, follow with your normal makeup regime
- **Eye massager:** whenever you need a de-puff or a deep hydration, use with your favourite serum or cream

MULTI-FUNCTION BUTTON

Press once for mild cleanse
Press again for a vigorous cleanse
Press again to start heated massage
Press again to power down

USING THE CLEANSER

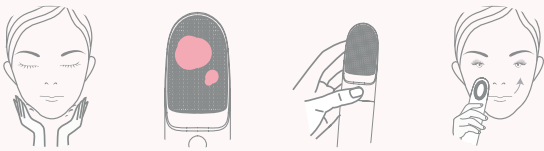

- 1 Wet your face with warm water
- 2 Wet the brush head and apply cleanser directly to the silicone bristles
- 3 Press the multi-function button to turn the silicone cleanser on, press again if you would like a more vigorous clean
- 4 Place the silicone bristles onto your cheek to start cleansing
- 5 Glide the brush over your face, focus on large areas and then around your eyes and nose
- 6 The device will automatically turn off after 2 minutes, finish any time and turn off by pressing the multi-function button
- 7 Rinse your face with warm water
- 8 Rinse the silicone cleanser with warm water and allow to dry before putting the travel cover on

HEATED MASSAGE FUNCTION



- 1 Press the multi-function button to turn the silicone cleanser on, press again 2 times to enter heated massage mode
- 2 For best results apply serums or moisturisers to your skin
- 3 Use the ribbed side of the silicone cleanser to gently massage your skincare deep into your skin
- 4 The silicone cleanser will turn off after 2 minutes, if you have not finished press the multi-function button to re-start
- 5 Finish any time, turn off by pressing the multi-function button

CHARGING

WARNING: Make sure the silicone cleanser and your hands are dry before charging.

- 1 Press the base of the silicone cleanser until the charging outlet is exposed
- 2 Insert the round end of the USB charging cable into the silicone cleanser
- 3 Plug the USB into a USB charging outlet
- 4 You will hear a beep as the silicone cleanser starts to charge
- 5 While charging the indicator lights under the cleanser bristles will light up in sequence
- 6 When fully charged the four indicator lights under the silicone cleanser bristles will stay on

LED INDICATOR LIGHTS

The LED lights under the bristles will show the battery level

- 4 indicator lights on: Battery is 75%-100% charged
- 3 indicator lights on: Battery is 50%-75% charged
- 2 indicator lights on: Battery is 25%-50% charged
- 1 indicator lights on: Battery is below 25% charged

CLEANING THE SILICONE CLEANSER

Always clean your silicone cleanser thoroughly after use. Wash the brush surface with water and soap, then rinse with warm water. Avoid using clay-based, silicone-based or grainy cleansers, exfoliators or scrubs, as they may damage the device's soft silicone touchpoints. Pat dry with a lint-free cloth or towel.

NOTE: Never use cleaning products containing alcohol, petrol or acetone, as they may irritate the skin and damage the silicone

FAQS

Issue	Problem	Solution
Low or no vibrations when in use	Low battery power	Charge the silicone cleanser for at least 2 hours
Charging light is not working	Cleanser has low battery or LED indicator light is not working	Try to charge the silicone cleanser for 2 hours, if the problem persists it maybe the charging cable, charging port or indicator light. Please contact customer care to help resolve the issue
Cleanser is not heating	Ambient temperature is too low	In extremely cold environments the thermal heating may not work effectively. Run the silicone cleanser under warm water and try again

ONE LAST THING...

Thank you for your purchase!

We appreciate your support and hope you enjoy your new product, as a reminder if you do have any questions or are unhappy with any aspect of your purchase, please don't hesitate to reach out to our Customer Service Team who are here to help.

Email: help@ellodi.com.au
Phone: 1300 173 989 (Mon-Fri 8.30am-6.00pm EST)
Web: www.ellodi.com.au

And make sure you follow us on our social accounts to keep up to date with specials and new products.

Thanks,

The Team at Ellodi



ellodiu